

Unlocking the fuel cap

You firstly need to establish if the fuel cap is currently locked. Turn the fuel cap clockwise, if it just spins it is locked, if it gets tighter it means it is unlocked and therefore just turning it anticlockwise will unlock it.

If locked, insert the key fully and turn it 180 degrees from start point. Turn fuel cap clockwise until it goes tight and then turn anticlockwise and the cap will release.

If this does not release the cap, repeat the procedure again, whilst 'jiggling' the key. IT is important that the key is fully inserted.

If after a few attempts the cap does not release, please contact your local manager or the on call engineer